


FLAT SUN CHASER LOUNGE

CL-1201


BREEZESTAtm

Recycled Poly Furniture

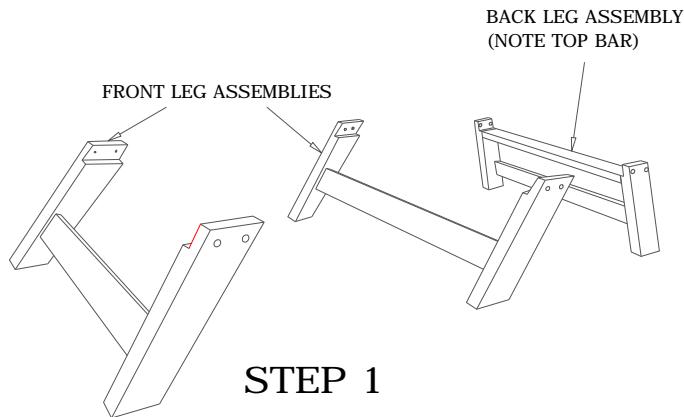


STEP 1

Arrange Front Leg Assemblies and Back Leg Assembly.

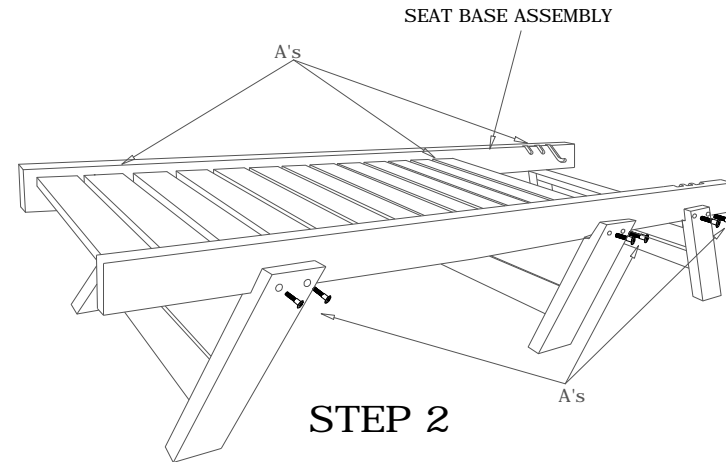


STEP 2


Attach Seat Base Assembly to legs using Chair Bolts (A)..

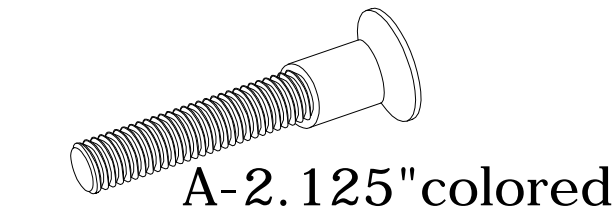

A-2.125"colored

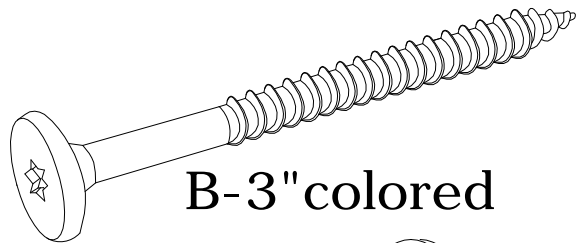


B-3"colored




C-0.5"nylon

LIST OF PARTS
 Front Leg Assemblies (2)
 Back Leg Assembly (1)
 Seat Assembly (1)
 Seat Back (1)
 Chair Bolts "A" (12)
 Colored Screws "B" (2)
 Nylon Washers "C" (2)
 Insert Bit Tool (1)

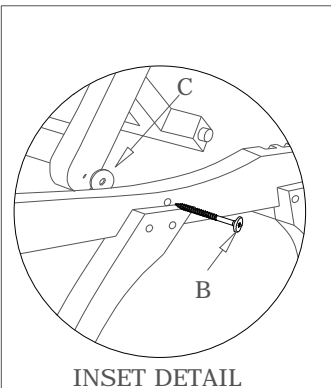

INSET DETAIL

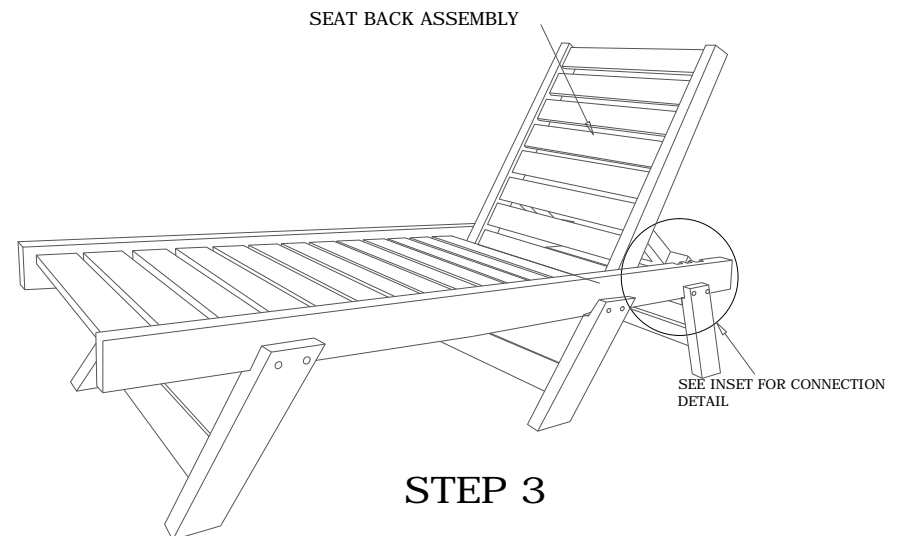

STEP 3

Attach Seat Back to Seat Base using Screws (B) and Nylon Washers (C), as shown in inset detail.