

## breezesta™


## CONTOURED SEAT BAR STOOL

BH-0904

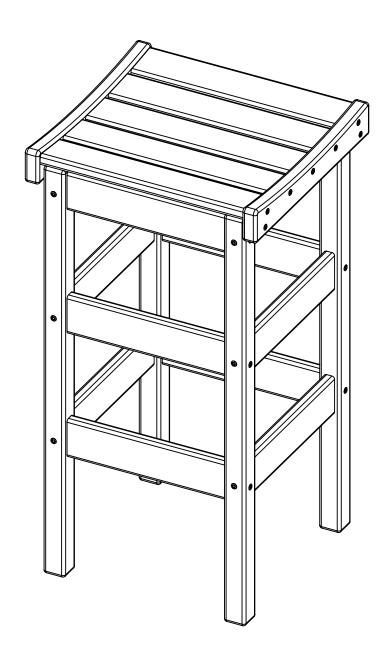

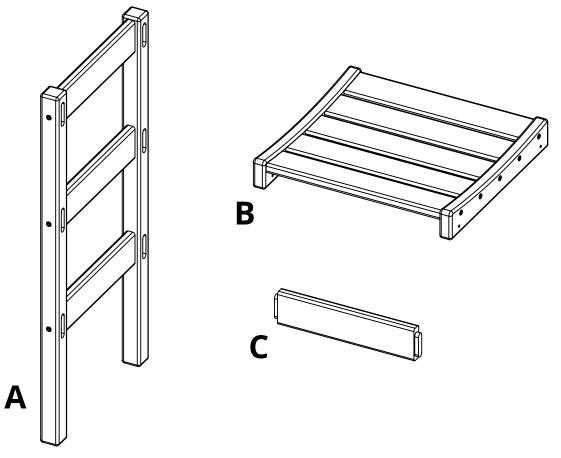


PARTS				
PART	DESCRIPTION	PART NO.	QTY	
Α	SIDE ASSEMBLY	SA-00152	2	
В	SEAT ASSEMBLY	SA-00153	1	
С	STOOL SPREADER	SS-11.25	6	

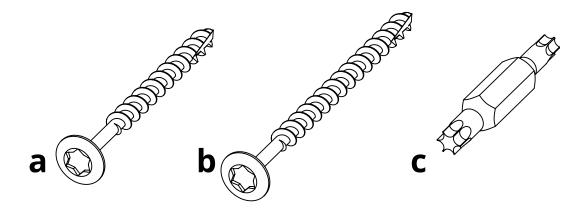


HARDWARE				
PART	DESCRIPTION	PART NO.	QTY	
а	#8 X 2" TORX SCREW	H-0000-S82	12	
b	#8 X 2-1/2" TORX SCREW	H-0000-S825	4	
С	T20 & T25 TORX BIT	H-0000-CTD	1	


Suggested Tools: Drill, Plastic Mallet


## Please read entire instructions before beginning

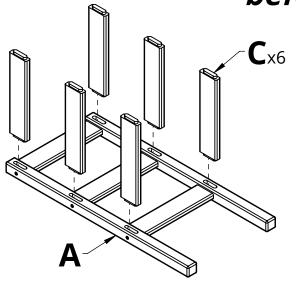

**1.** Place Part A on its side and insert Parts C into place as shown




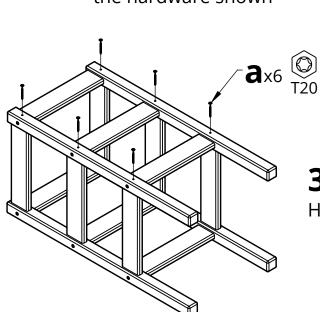

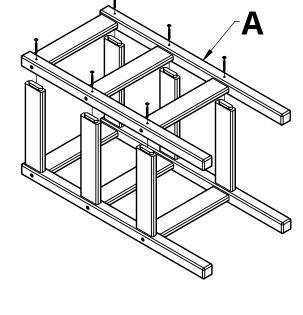

**a**x6 (T20)

**3.** Turn the assembly over and insert Hardware a

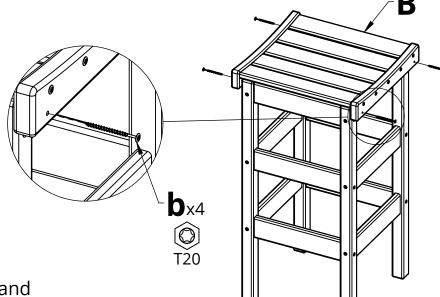

**4.** Stand the asssembly upright and connect Part B with Hardware b