


breezesta™

SKYLINE GARDEN BENCH 60"


SK-0405-60



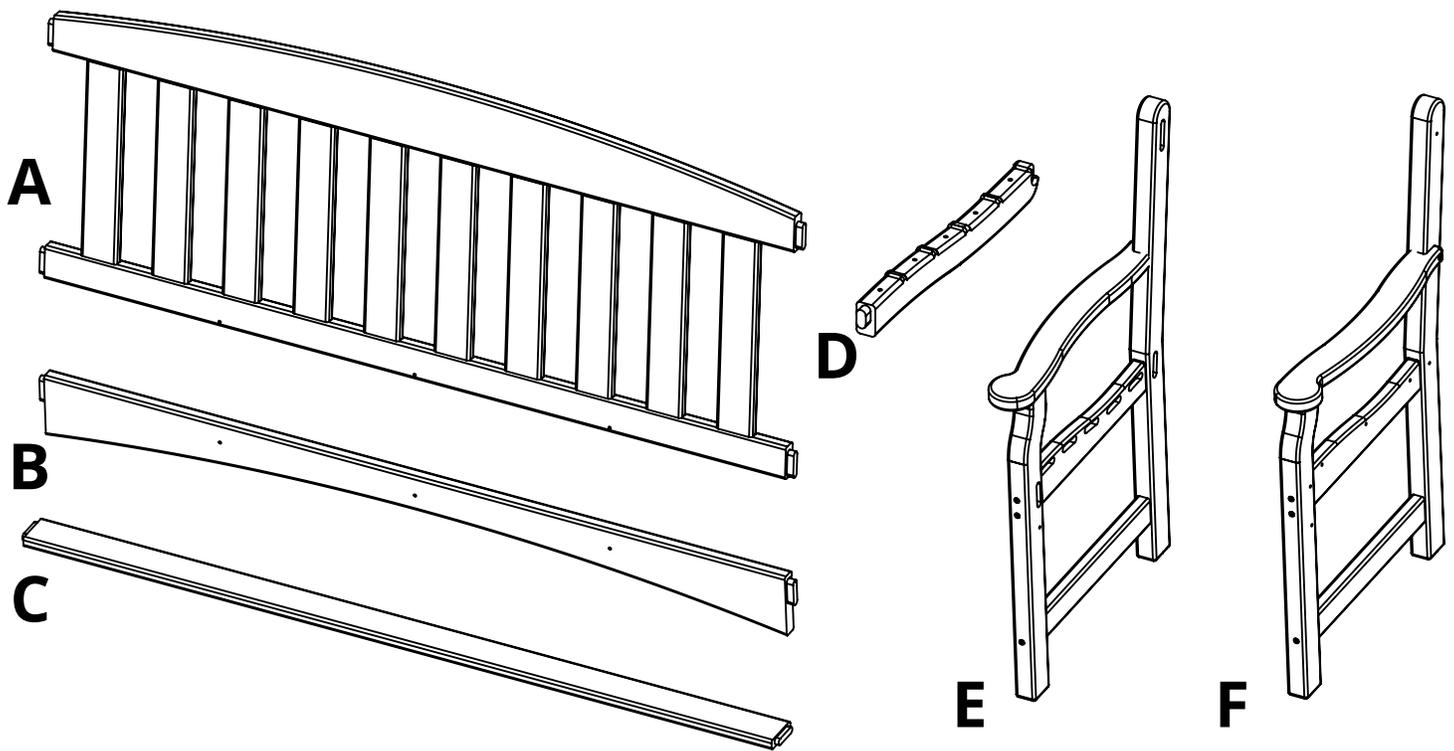

PARTS

PART	DESCRIPTION	PART NO.	QTY
A	BACK ASSEMBLY	SA-00173	1
B	FRONT RAIL ASSEMBLY 60"	SA-00198	1
C	60IN SEAT SLAT	SS-57.562	5
D	SEAT SUPPORT	PRT-00294	3
E	LEFT SIDE ASSEMBLY	SA-00159	1
F	RIGHT SIDE ASSEMBLY	SA-00160	1

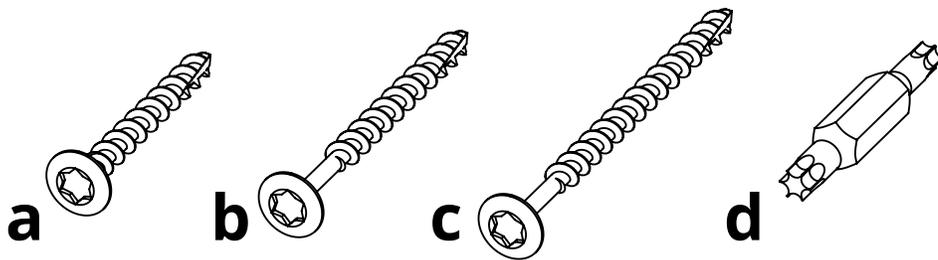


HARDWARE


PART	DESCRIPTION	PART NO.	QTY
a	#8 X 1-1/2" TORX SCREW	H-0000-S815	9
b	#8 X 2" TORX SCREW	H-0000-S82	15
c	#8 X 2-1/2" TORX SCREW	H-0000-S825	11
d	DOUBLE SCREW	H-0000-DS	1

Suggested Tools: Drill, Plastic Mallet



Please read entire instructions before beginning

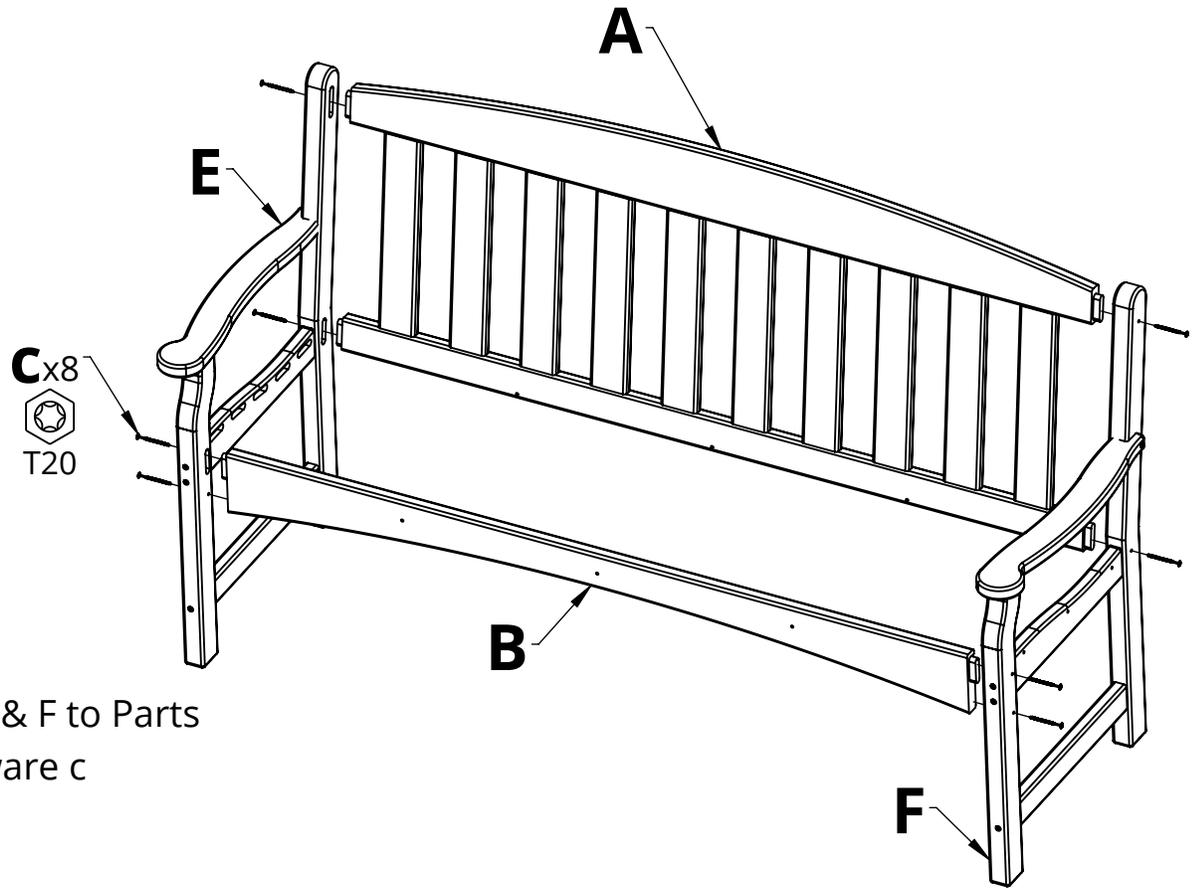


1. Attach Parts E & F to Parts A & B using Hardware c

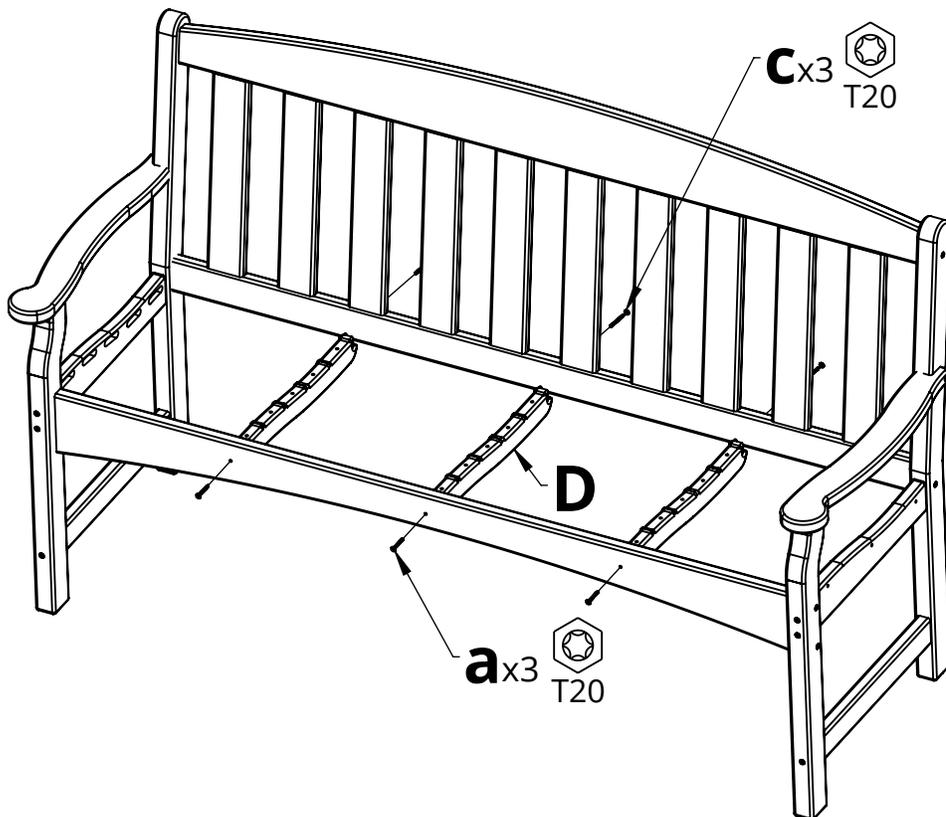

2. Connect Parts D to the previous assembly as shown

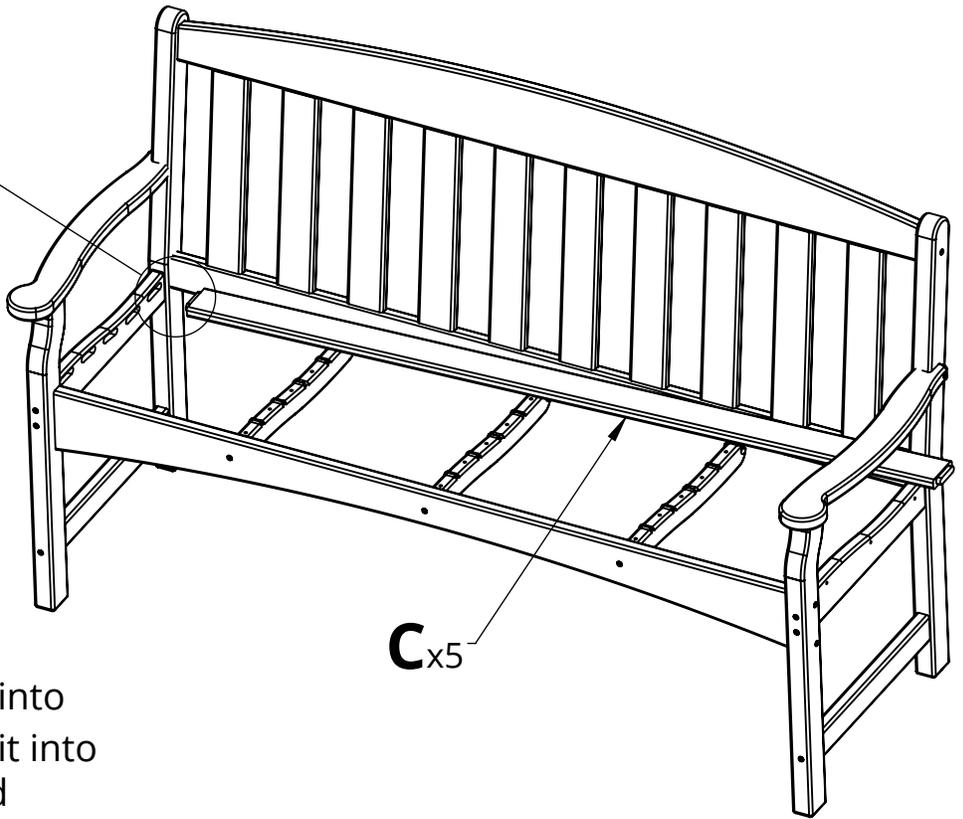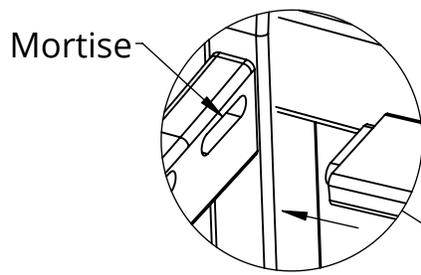

3. Slide one end of Parts C into the mortise as shown & flex it into the mortise on the other end

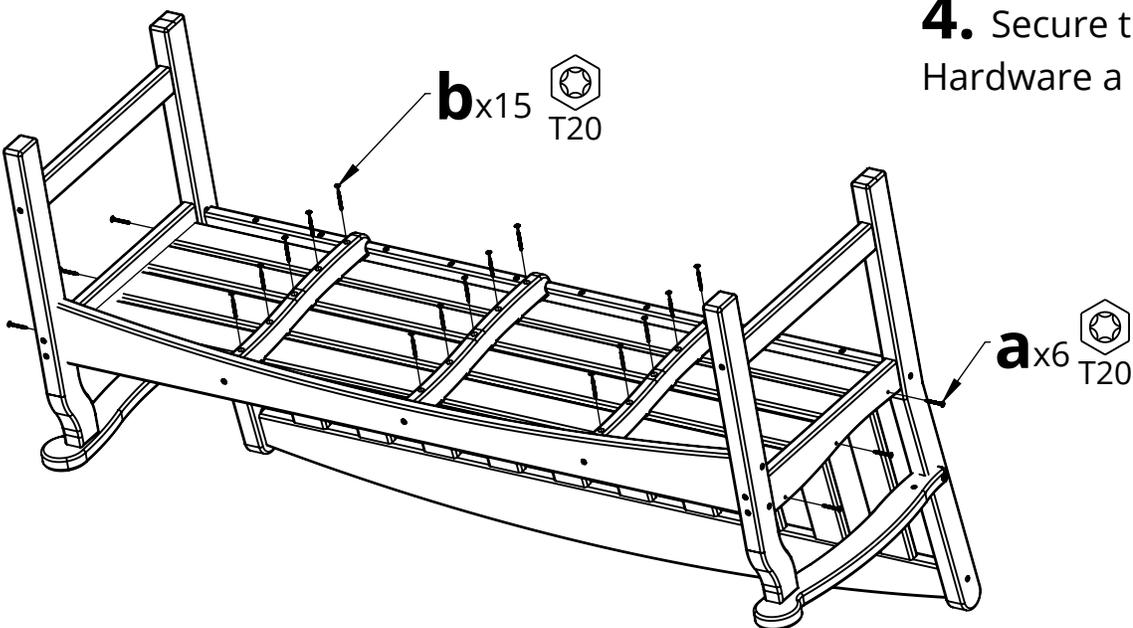

4. Secure the assembly using Hardware a & b as shown